

 
## Remote keyless entry

### REMOTE KEYLESS ENTRY SYSTEM (IF EQUIPPED)

This device complies with part 15 of the FCC rules and with RS-210 of Industry Canada. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

**Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.**

You can use the keyless entry keypad to lock or unlock the doors without using a key.



The keypad can be operated with the factory set 5-digit entry code; this code is located on the owner's wallet card in the glove box, is marked on the computer module, and is available from your authorized dealer. You can also create your own 5-digit personal entry code.

When pressing the controls on the keypad, press the middle of the controls to ensure a good activation.

**Note:** To preserve battery life, the backlight will only turn on during low light conditions.

#### Programming a personal entry code

To create your own personal entry code:

1. Enter the factory set code.
2. Within five seconds press the 1 • 2 on the keypad.
3. Enter your personal 5-digit code. Each number must be entered within five seconds of each other.

## Remote keyless entry

4. The doors will again lock then unlock to confirm that your personal keycode has been programmed to the module.

### Tips:

- Do not set a code that uses five of the same number.
- Do not use five numbers in sequential order.
- The factory set code will work even if you have set your own personal code.
- If you set a second personal code it will erase your first personal code.

### Erasing personal code

1. Enter the factory set 5-digit code.
2. Press and hold the 1 • 2 for three seconds. This must be done within five seconds of completing step 1.

Your personal code is now erased and only the factory set 5-digit code will work.

### Anti-scan feature

If the wrong code has been entered 7 times (35 consecutive button presses), the keypad is disabled for one minute and the keypad lamp will flash during this time. **Note:** Pressing 7 • 8 and the 9 • 0 simultaneously during this one minute period will still lock the vehicle.

The anti-scan feature will turn off after one minute of keypad inactivity.

### Unlocking and locking the doors using keyless entry

**To unlock the driver's door,** enter the factory set 5-digit code or your personal code. Each number must be pressed within five seconds of each other.

**To unlock all doors,** press the 3 • 4 control within three seconds of entering a valid keypad code.

## Remote keyless entry

**To unlock the trunk**, press the 5 • 6 control within three seconds of entering a valid keypad code.

**To lock all doors**, press the 7 • 8 and the 9 • 0 at the same time. You **do not** need to enter the keypad code first.

To verify all doors are closed properly, press the 7 • 8 and the 9 • 0 again within three seconds. If the doors are closed, the horn will chirp once; if any door is ajar, the horn will chirp twice.

**Vehicle Specific Functions**, see the enclosed Keyless Entry Keypad programming procedures chart for other vehicle specific programming instructions.

### Low battery warning

When the battery in the keypad is running low, the remote keypad will provide you with a warning.

The remote keypad battery has two power management modes:

- **Power save mode** — In this mode, the keypad light will not function, but the lock and unlock features will still be active. **Note:** Because of the nature of the keypad battery, the power save mode does not indicate that the battery needs to be changed.
- **Alert mode (low battery warning)** — In this mode, the keypad light will not function. After you have entered your factory set or personal entry code into the keypad, instead of unlocking the driver's door, the vehicle will unlock the driver's door, lock it, then unlock it again in order to signal that the battery should be changed.

### Replacing the batteries


The keyless entry keypad uses one coin-type three-volt lithium battery (Service Part Number 3L2W-19G545-A). This replacement battery is only available through your authorized dealer.

## Remote keyless entry

To replace the battery:

1. Use the largest flathead screwdriver that will insert into the slot on the right side of the keypad. Gently twist the screwdriver to pry off the top cover. Pull the cover off by pulling to the left and then up. The top cover and the internal components of the keypad will come off the vehicle and the back cover will remain mounted to the vehicle.
2. Remove the internal components of the keypad from the top cover and place the top cover on a soft surface to avoid scratching the decorative finish. **Note:** Do **not** remove the silicone rubber membrane from the rest of the electronics.
3. Insert the screwdriver into one of the two slots on the metal battery holder, located on either side of the (+) indicator. The battery will then slide out enough to obtain with your fingers.

4. Remove the old battery from the unit and replace it with a new battery, ensuring that the (+) indicator is properly aligned properly and seated completely inside the battery holder.

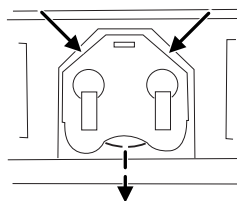

5. Replace the keypad internal components back inside the top cover. **Note:** Ensure the screwdriver slot is located next to the 9 • 0 keypad.
6. Hold the top cover and the internal components together, align the unit with the back cover mounted on the vehicle, and press the two pieces together. Run your finger around the perimeter of the keypad to ensure it is properly seated.
7. Press the 7 • 8 and the 9 • 0 controls simultaneously to lock the vehicle and to verify the keypad is functioning properly.

## Remote keyless entry

**Note:** Replacement of the battery will **not** cause the remote keyless keypad to become deprogrammed from your vehicle. The remote keyless keypad should operate normally after battery replacement.

### **Replacing lost/damaged remote keyless entry keypad**

If a keyless entry keypad has been lost or damaged, or you would like to buy an additional keyless entry keypad, you can either reprogram them yourself, or take **all keyless entry keypads and remote entry transmitters** to your authorized dealer for reprogramming.

### ***How to program your remote keyless entry keypad***

You must have **all keyless entry keypads and remote entry transmitters** (maximum of four) available before beginning the programming procedure.

See the Keyless Entry Keypad Programming procedures chart for your vehicle specific programming procedure.