

Please read all instructions before installation.

STEP 1 – PRIOR TO INSTALLATION

- A) Bushwacker only approves installing the flares according to these written instructions with the hardware provided. **WARNING:** Failure to install according to these instructions will invalidate the warranty. This includes, but is not limited to using alternative installation methods, hardware, or materials. **DO NOT USE:** Loctite, SuperGlue, or similar products on the hardware or the flares.
- B) **Performance:** This kit is to be installed only on the authorized vehicles and with only OEM wheels and rims. **Not compatible with the 68T Technology Package with lane keeping sensors.**
- C) **Exhaust System:** Aftermarket exhaust systems must maintain a minimum 4" clearance.
- D) **Decals:** Flares may interfere with existing decals on vehicle. If you wish, remove decals prior to installation of flares.
- E) **Install:** Vehicle and parts should be at room temperature for installation.
- F) **Review:** The flares may shift during transport, ensure edge trim follows contour of flare edge. If edge trim has rolled behind flare, re-work edge trim so that it is snug against flare edge.

*Remove factory flares if present on vehicle. See Ford Manual.

TOOLS FOR EASY INSTALLATION:

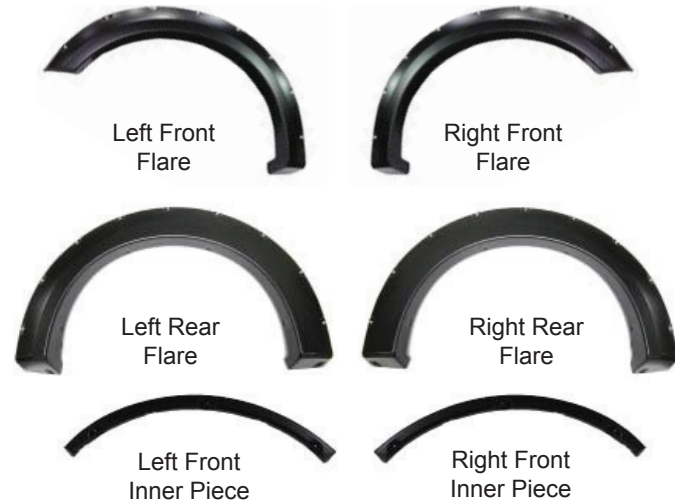
- #2 Phillips Driver
- Socket Wrench
- 7/32" Socket
- 9/32" Socket
- Grease Pencil

Installation Sheet Ford Pocket Style® Fender Flares Set of 4

Set Part #VFL3Z 16268 A
Rev-0 06/24/2015

For complete fitment info visit : www.bushwacker.com

Component List:



WARRANTY PERIOD

NEW VEHICLE PURCHASE





- USA - 3 year or 36,000 miles whichever comes first
- Outside USA - 3 years or 60,000 kilometers whichever comes first




PRODUCT NOT PURCHASED AT TIME OF NEW FORD VEHICLE PURCHASE

- USA - 2 years/ unlimited mileage or the remainder of the new vehicle warranty.
- Outside USA - 2 years/ unlimited kilometers or the remainder of the new warranty

FOR WARRANTY INFO CALL 800-234-8920

Kit Contents:

- | | | | | | | |
|--|---|---|--|---|---|--|
| 1.

CL1-0009,
Long "U" Clip,
Magni 565
10 pcs | 2.

CL1-0005,
Dacromet "S"
Spring Clip,
2 pcs | 3.

MT1-0014,
1" x1.5" x.01"
Black Mylar Tab,
2 pcs | 4.

MT1-0034,
1" x1.5" x.06"
Blk 3M Foam Tab,
10 pcs | 5.

SW1-0058,
#10 x 5/8" Phillips
SS Truss Screw,
16 pcs | 6.

SW1-0050,
10 x 5/16 Phillips
Truss Screw,
2 pcs | 7.

RV1-P006,
8 x 20mm Black
Nylon Retainer,
2 pcs |
| 8.

ET1-0002,
Edge Trim Tool,
1 pc | | | | | | |